


37 XPE LED BEAM MOVING HEAD

MJ-1011

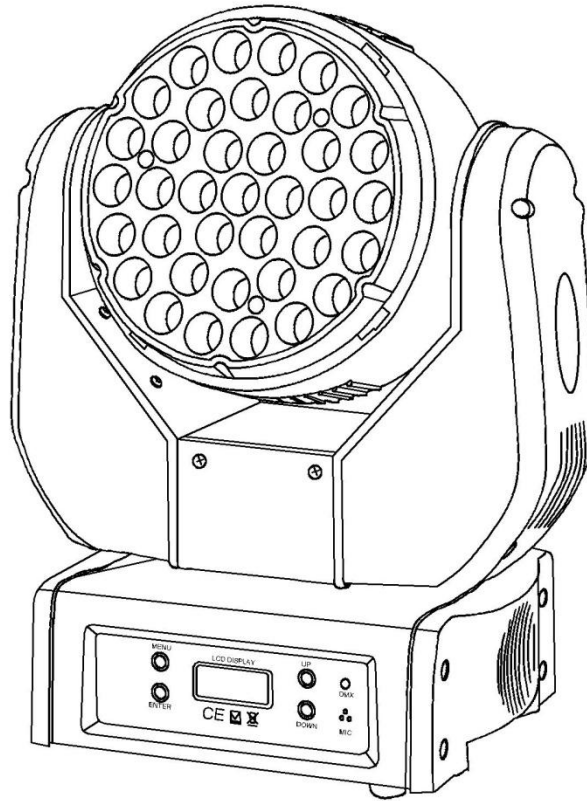

INSTRUCTION MANUAL

Thank you for choosing our LED beam moving head light. For the sake of your safety, Please read and follow these instructions carefully and keep this manual in a safe place for future reference.

Catalogue

Chapter	Page
Safe Usage Of The Product -----	3
Install The Equipment -----	4
Power Code Connection -----	4
DMX Connection -----	5
DMX Terminator -----	5
Function Set -----	6
Operation Menu -----	6
Control Panel Of LED Display Information-----	9
Maintenance -----	9
Keeping The Product Clean -----	9
Trouble Shooting-----	10
Equipment and Appendix-----	10
Channel List-----	10
Technical Parameters-----	12

☆Important notice:

- In this instruction for use contains about the installment and the use aspect important information of the LED moving head. When installing and using, you need to look this usage instruction strictly.
- Before open the LED moving head and if you want to do the repair work, please make sure the power source is at the separation condition.
- Every unit is tested completely and packed properly by the manufacturer. Please make sure the packing and the unit are in good condition before installation and use. Should there be any damage caused by transportation, consult your dealer and do not use the unit. Any damage caused by improper use will not be assumed by the manufacturer or dealer.

Attention: Unceasingly carries on the product improvement about our company the policy, in this instruction booklet carries the data will have the possibility to be able to change in the future, when no longer separate notice change matters concerned. Our company retains when the product improvement changes the related specification the authority. This instruction booklet publisher cannot be responsible regarding this instruction booklet in information accuracy, also cannot the related consequence which causes regarding these information be responsible.

SAFE USAGE OF THE PRODUCT

When unpacking and before disposing of the carton, check there is no transportation damage before using the product. Should there be any damage caused by transportation, consult your dealer and do not use the apparatus.

The product is for indoor use only, IP20. Use only in dry locations. Keep this device away from rain and moisture, excessive heat, humidity and dust. Do not allow contact with water or any other liquids.

The product is not designed or intended to be mounted directly on to inflammable surfaces

The product is only intended for installation, operation and maintenance by professional person.

The product must be installed in a location with adequate ventilation, at least 50cm from adjacent wall surfaces. Be sure that no ventilation slots are blocked.

Do not project the beam onto inflammable surfaces, minimum distance is 5m.  5m 

Avoid direct exposure to the light from the lamp. The light is harmful to the eye.

Do not attempt to dismantle or modify the projector in any way.

Electrical connection must only be carried out by qualified personnel.

Before installation, ensure that the voltage and frequency of power supply match the power requirements of the projector.

It is essential that each projector is correctly earthed and that electrical installation conforms to all relevant standards.

Do not connect this device to any other types of dimmer apparatus.

Make sure that the power-cord is never crimped or damaged by sharp edges. Never let the power-cord come into contact with other cables. Only handle the power-cord by the plug. Never pull out the plug by tugging the power-cord.

Keep the optical system clean. Do not touch the LED lens with bare hands.

The product should always be installed with a secondary safety fixing. On the projector base bracket, there is a hole for the safety cord provided. It should be attached as shown in “installing the projector” section.

LED lens shall be changed if they have become visibly damaged to such an extent that their effectiveness is impaired, for example by cracks or deep scratches.  


Exterior surface temperatures of the luminaire after 5 minutes operation is 40 °C, when steady state is achieved 50 °C.

There is no user serviceable parts inside the projector, do not open the housing and never operate the product with the covers removed.

If you have any questions, don't hesitate to consult your dealer or manufacturer.

★Always disconnect from the mains, when the device is not in use or before cleaning it or before attempting any maintenance work !

Install The Equipment:

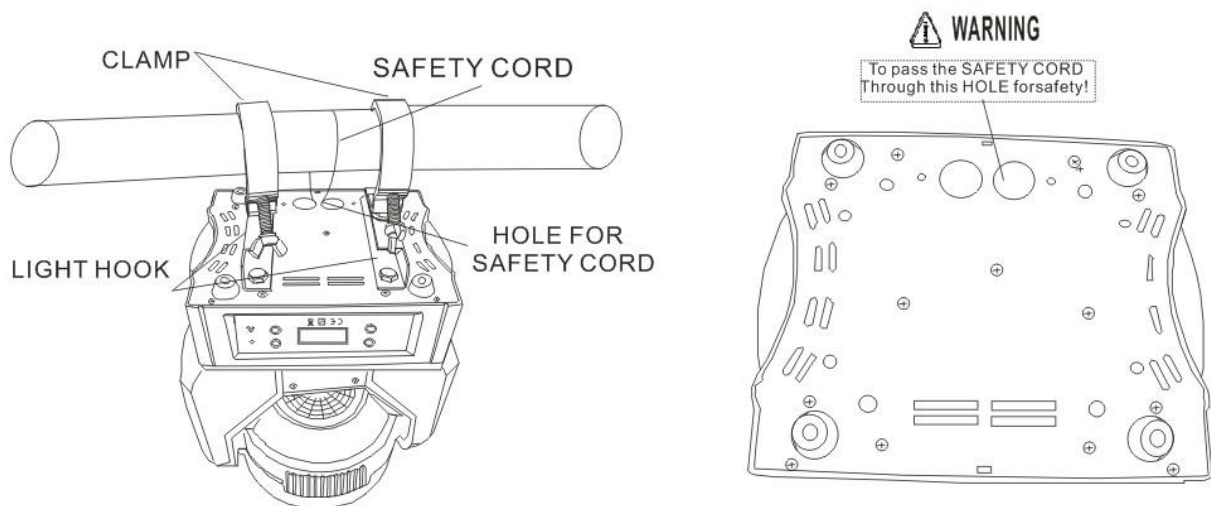

Use 1pcs clamp and safety cord(need to purchase).Use clamp fix with light hook which in the packing box with light, then use screw install to the bottom of lamp. Hang the fixture on the structure and fasten the screws attached to each clamp. Make sure the light is installed reliable, and confirm the light which you fixed is strong enough for hanging the light. Base on safety reason, please according to the above picture using safety wire cross the light to make it strong enough again.

Warning!

1. Hook and clamp only use for hanging the light. Do not use clamp as a tool to move fixtures.
2. Base on safety reason, please use the safety cord which can afford the weight ten times of lamp through Insurance hole for auxiliary hanging.
3. Don't use the handle of the moving head light to fixed or lift!

Power Code Connection:

Connect the power cord as follows:

L (live) =brown


E (earth) =yellow/green

N (neutral) =blue

Use the plug provided to connect the mains power to the projector paying attention to the voltage and frequency marked on the panel of the projector. It is recommended that each projector be supplied separately so that they may be individually switched on and off.

★It is essential that each projector is correctly earthed and the electrical installation conforms to all relevant standards.


DMX Connection:

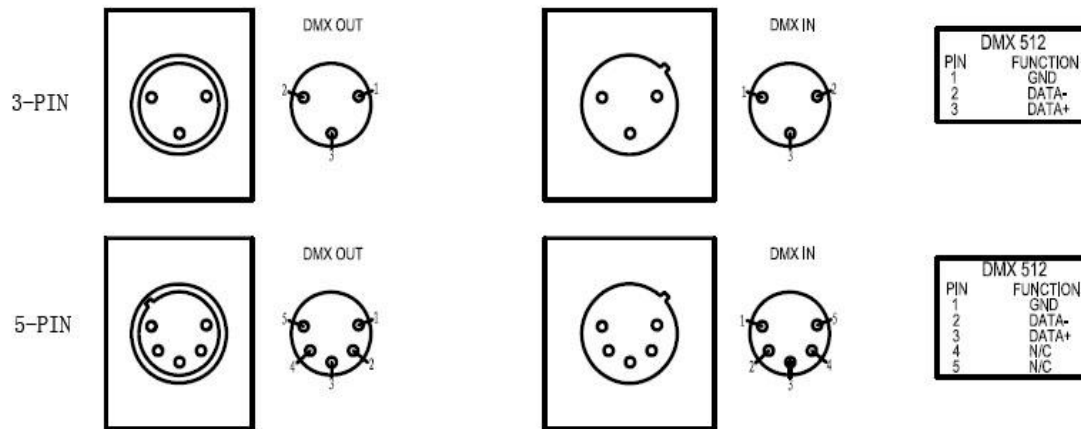

Connection between the controller and a projector and between one projector and another must be made with a 2 core-screened cable, with each core having at least a 0.5mm diameter. Connection to and from the projector is via cannon 3 pin (which are included with the projector) XLR plugs and sockets. The XLR's are connected as shown in the figure above.

Note: Care should be taken to ensure that none of the pins touch the metallic body of the plug or each other. The body of the plug is not connected in any way. The XLED 590 accepts digital control signals in protocol DMX512 (1990).


Connect the controller's output to the first fixture's input, and connect the first fixture's output to the second fixture's input and connect the rest fixtures in the same way. Eventually connect the last fixture's output to a DMX terminator as shown in the figure below.

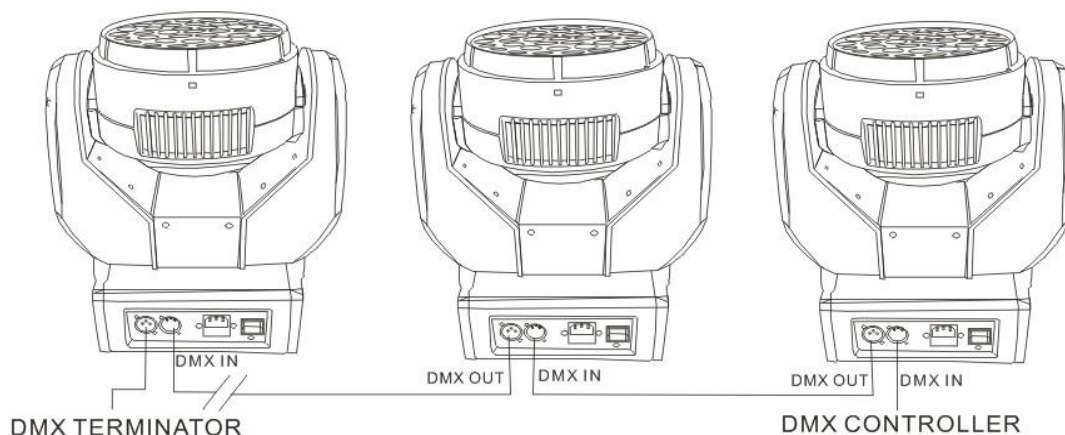


DMX Terminator:

In the Controller mode, at the last fixture in the chain, the DMX output has to be connected with a DMX terminator. This prevents electrical noise from disturbing and corrupting the DMX control signals.

The DMX terminator is simply an XLR connector with a 120Ω (ohm) resistor connected across pins 2 and 3, which is then plugged into the output socket on the last projector in the chain. The connections are illustrated below.

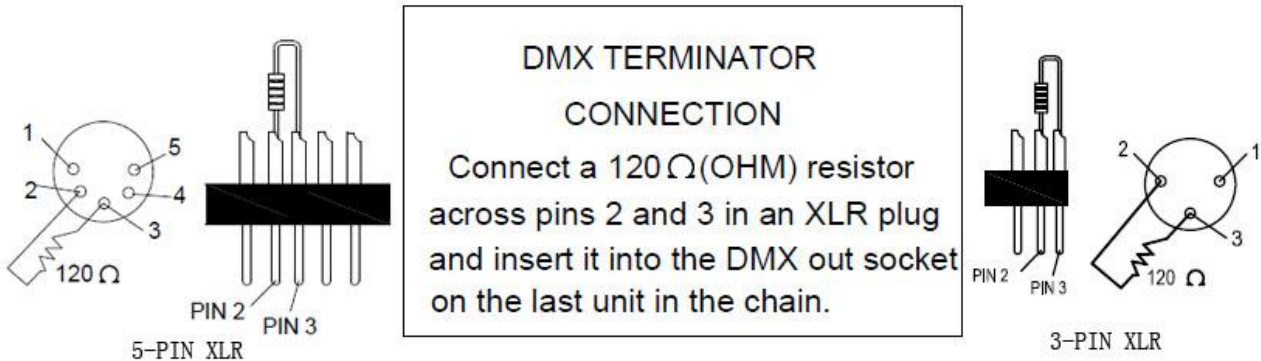

Function Set:

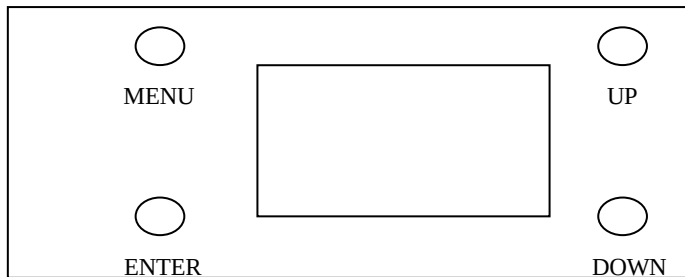

Use button switch and LCD display, can set the address code and function code easily. Check or modify lighting function settings, Press the **MENU** button. LCD display panel will display function menu of lighting. Function operation menu all have corresponding submenu. Each menu all represent the specific functions of lamps, specific see below "operation menu" section.


Set or browse function setting of lamp, Press **UP** or **DOWN** button.

Press **ENTER** button to save your changes or to **ENTER** submenu, Press **UP** or **DOWN** can change value(Plus or reduce number).

According to the **ENTER** key to return to the last menu.

Operation Menu:

➤ Menu Structure chart

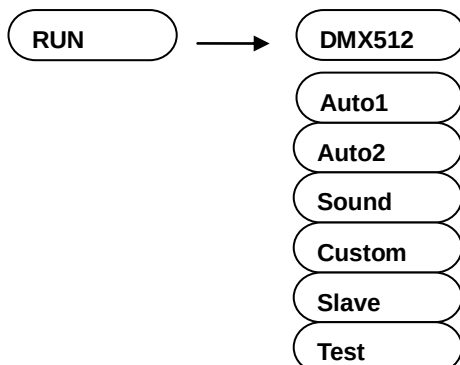

DMX512: Controlled by the DMX controller


Auto1: Built-in programs 1

Auto2: Built-in programs 2

Sound: Sound control (sensitivity adjusted by GENERAL->SOUND)

Custom: Execute user programs. Programs need to edit in the EDIT->PROGRAM

Slave: Slave mode.

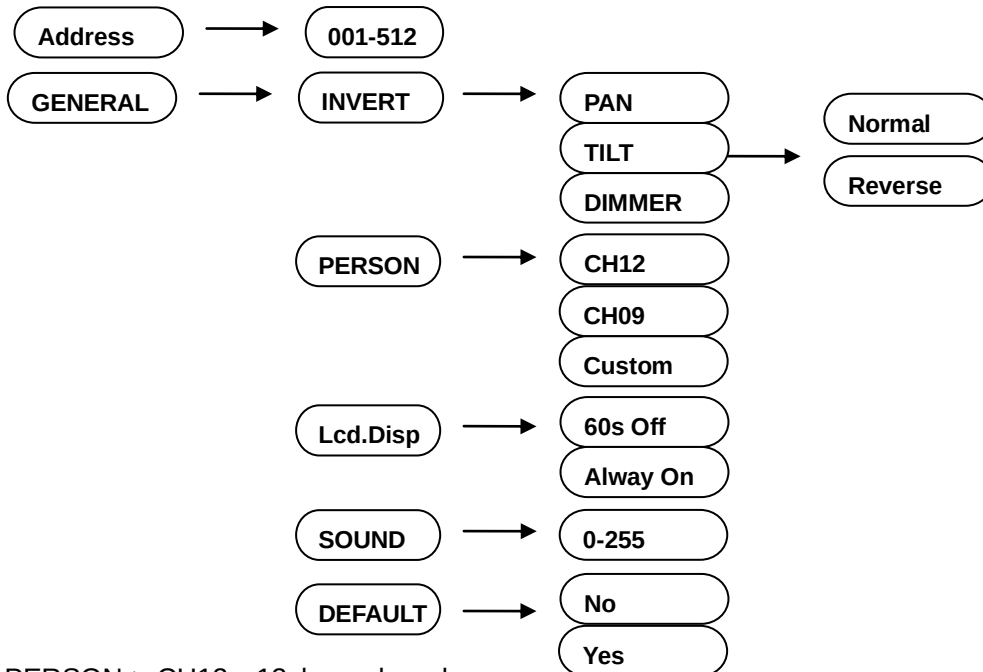

PERSON-> CH12: 12channel mode;

CH09: 9 channel mode;


Custom: User edit channel need edit under the EDIT->CHANNELS

Lcd.Disp -> 60s Off : No button operation after 60s, LCD display backlight OFF.

Always On :Always ON

SOUND: Sensitivity adjusted of sound control, default value is 120

Default: Recovery system default values

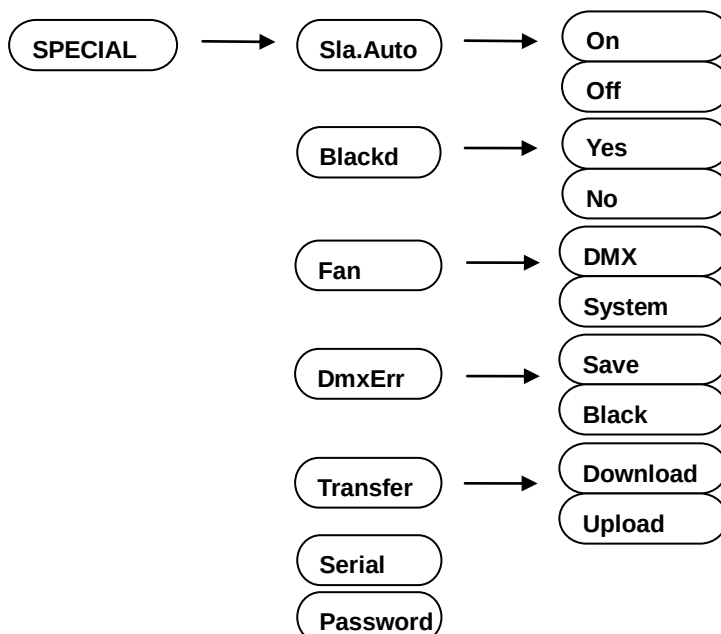

Sla.Auto : ON / OFF slave automatic testing function.

ON: When this light under the DMX 512 mode (RUN->DMX512) ,if test master light signal, then it can enter slave mode automatic, do not need to operation iton the panel of (RUN->Slave) .

OFF: close this function.

Blackd: Control the delayed function of 12th channel.

Yes: Turn on 3s delayed.

No: Immediately implement.

Fan: Control the FAN of 12th channel.

DMX: Human control it via controller.

System: only can controlled by system inside.

DmxErr: DMX signal offline dispose.

Save: save current situation.


Black: LED light extinguish.

Transfer->Download: Download configuration

Transfer->Upload: Upload configuration


Upload download all Settings and program

Serial : serial number.

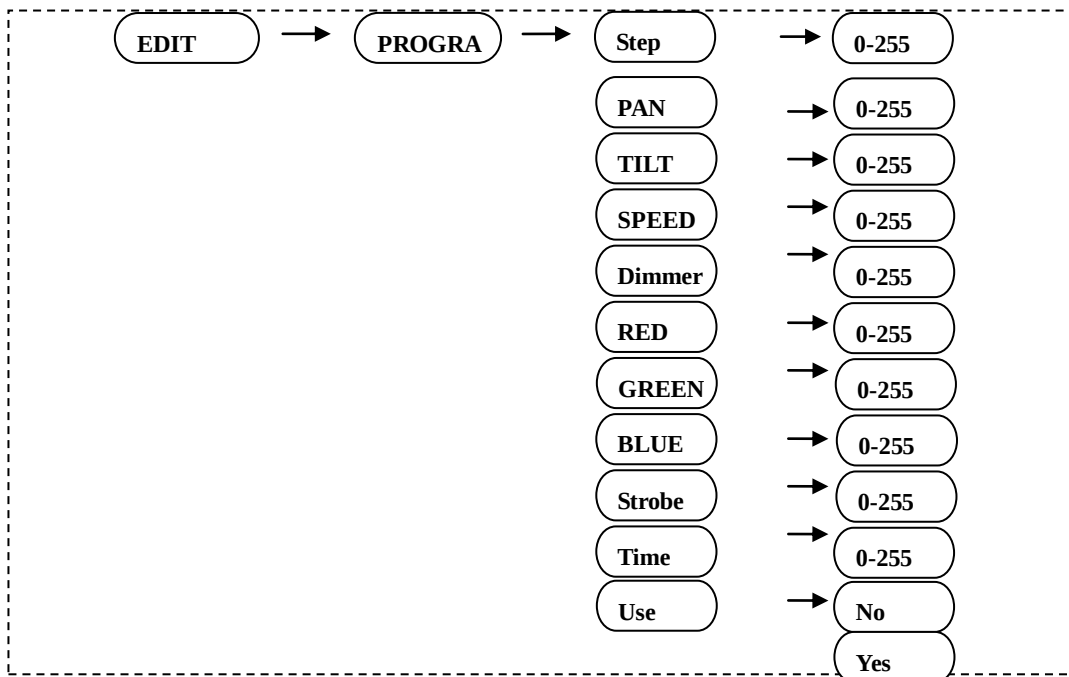

Time: Must be more or equal to 1 second

Use = When YES, the STEP is available.

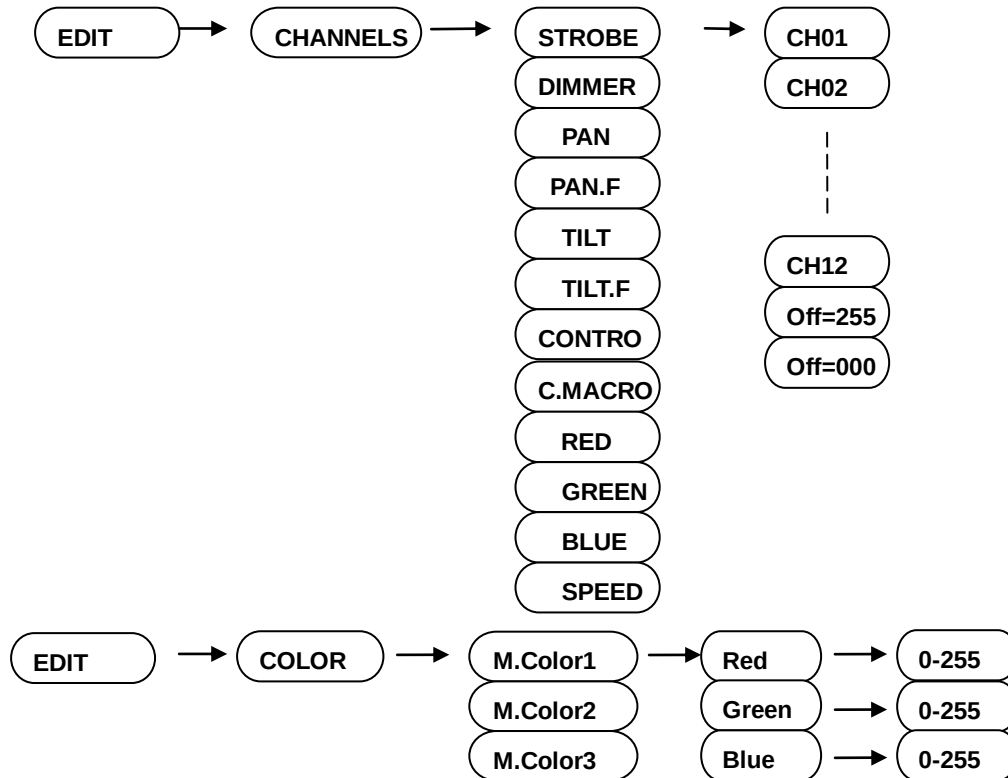

M.Color1: Determine the color of 191-200 in 8th channel.

M.Color2: Determine the color of 201-210 in 8th channel.

M.Color3: Determine the color of 211-220 in 8th channel.

Control panel of LED display information:

Red	On	DMX signal OK
	Off	No DMX signal
	Flash	DMX signal error

Maintenance:

To prolong the life of the projector, some maintenance work has to be done to ensure the LED optical system in good condition. If the projector does not function, check the fuses on the power socket of the projector, they should only be replaced by fuses of the same specification. Should these be damaged, call a qualified technician before replacement. The projector has thermal protection device that will switch off the projector in case of overheating. Should either of these operate, check that the fans are not blocked, and if they are dirty, clean them before switching on the projector again. Check that the fans are operational, if not, call a qualified technician.

☆Any maintenance work should only be carried out by qualified technicians.

Keeping The Product Clean:

To ensure the reliability of the projector, it should be kept clean. It is recommended that the fans should be cleaned every 15 days. LED lens should also be regularly cleaned to maintain an optimum

light output.

Cleaning frequency depends on the environment in which the fixture operates: damp, smoke or particularly dirty surroundings can cause greater accumulation of dirt on the unit's optics. A soft cloth and typical glass cleaning products should be used for cleaning. It is recommended to clean the external optics at least once every 15 days.

☆ **Do not use any organic solvent, e.g. alcohol, to clean housing of the apparatus.**

Trouble Shooting:

Problem	Answer
The LED moving head light doesn't switch on.	Check the fuse the power socket
Although shines, but the LED moving head lamp doesn't accept the instruction of the controller.	Check the digital start address and also check the connection situation of the communication control line
LED moving head lamp only can work intermittently.	Inspect the power supply and voltage is whether normal.
Do not receive the DMX512 signal.	Whether the signal lines do contact well or broken.
The light beam appears gloomily.	Check that the heat dissipation system is running normally or Inspect the optics part is whether clean.

☆ **Other maintain work should by the specialist which has the experience to carry on.**

Equipment and Appendix:

The packing list of this light as follows:

☆ Led moving head light	1pcs
☆ Power Cable	1pcs
☆ XLR connector	1unit
☆ Light Hook	2pcs
☆ M6 Screw	4pcs
☆ The Product of Instruction	1pcs

Channel List:

Custom Mode(12CH)

Channel	Function	Value	Function Description
CH1	Strobe	0-255	Slow->Fast
CH2	Dimmer	0-255	Dimmer 0-100%
CH3	Pan	0-255	Pan movement
CH4	Pan Fine	0-255	Pan Fine
CH5	Tilt	0-255	Tilt movement
CH6	Tilt Fine	0-255	Tilt Fine

CH7	Control (If the panel menu allows,after 3s delayed will activation function, otherwise will be implemented immediately. *If the panel menu allows, function will be available.)	0-19	No function
		20-39	PAN/TILT Black Activated
		40-59	PAN/TILT Deactivated
		60-79	FAN Auto (1)
		80-99	FAN Slow (1)
		100-119	FAN Normal (1)
		120-139	FAN Fast (1)
		140-149	AUTO1
		160-179	AUTO2
		180-199	Custom program
		200-219	Sound
		220-239	Reset
		240-255	No function
CH8	Macro	0-10	No Function
		11-30	RED 100%, GREEN Up, BLUE 0%
		31-50	RED Down, GREEN 100%, BLUE 0%
		51-70	RED 0%, GREEN 100%, BLUE Up
		71-90	RED 0% ,GREEN Down,BLUE 100%
		91-110	RED Up,GREEN 0%, BLUE 100%
		111-130	RED 100%, GREEN 0%, BLUE Down
		131-150	RED 100%, GREEN Up,BLUE Up
		151-170	RED Down, GREEN Down, BLUE 100%
		171-190	RED 100% , GREEN 100%, BLUE100%
		191-200	Custom Color1(edited via control panel)
		201-210	Custom Color2(edited via control panel)
		211-220	Custom Color3(edited via control panel)
		221-255	Seven color loop(Slowt->Fast)
CH9	Red	0-255	0-100%
CH10	Green	0-255	0-100%
CH11	Blue	0-255	0-100%
CH12	Speed	0-255	Pan/Tilt speed

9CH Mode:

Channel	Value	Control function
CH1	0-255	Pan
CH2	0-255	Tilt
CH3	0-255	Dimmer
CH4	0-255	Red
CH5	0-255	Green
CH6	0-255	Blue
CH7	0-255	Macro
CH8	0-255	Strobe
CH9	0-255	Control

12CH MODE

Channel	Function	Value	Function Description
CH1	Pan	0-255	Pan movement
CH2	Pan Fine	0-255	Pan Fine
CH3	Tilt	0-255	Tilt movement
CH4	Tilt Fine	0-255	Tilt Fine
CH5	Speed	0-255	Pan/Tilt speed
CH6	Dimmer	0-255	Dimmer 0-100%
CH7	Red	0-255	0-100%
CH8	Green	0-255	0-100%
CH9	Blue	0-255	0-100%
CH10	Macro	0-10	No Function
		11-30	RED 100%, GREEN Up, BLUE 0%
		31-50	RED Down, GREEN 100%, BLUE 0%
		51-70	RED 0%, GREEN 100%, BLUE Up
		71-90	RED 0% , GREEN Down, BLUE 100%
		91-110	RED Up, GREEN 0%, BLUE 100%
		111-130	RED 100%, GREEN 0%, BLUE Down
		131-150	RED 100%, GREEN Up, BLUE Up
		151-170	RED Down, GREEN Down, BLUE 100%
		171-190	RED 100% , GREEN 100%, BLUE 100%
		191-200	Custom Color1 (edited via control panel)
		201-210	Custom Color2 (edited via control panel)
		211-220	Custom Color3 (edited via control panel)
		221-255	Seven color loop (Slowt->Fast)
CH11	Strobe	0-255	Slow->Fast
CH12	Control (If the panel menu allows, after 3s delayed will activation function, otherwise will be implemented immediately. *If the panel menu allows, function will be available.)	0-19	No function
		20-39	PAN/TILT Black Activated
		40-59	PAN/TILT Deactivated
		60-79	FAN Auto (1)
		80-99	FAN Slow (1)
		100-119	FAN Normal (1)
		120-139	FAN Fast (1)
		140-149	AUTO1
		160-179	AUTO2
		180-199	Custom program
		200-219	Sound
		220-239	Reset
		240-255	No function

Technical Parameters:

Construction: Composite plastic, die-casting aluminum,

Voltage: AC90V-240V; 50/60Hz

Power Consumption: 148W (220V)

LED Bulbs: CREE XPE 3W*37LEDs(Red:13;Green12;Blue:12)

LED Current: 750mA

LED Lifetime: 50000Hours

Colors: RGB color mixing

Adjusts the light: 0-100 electron adjusts the light, various colors may alone move also may mix the color tone

Strobe: 1-25/second high speed strobe, but single color Mixes the color strobe

Head Movement: Pan 540°, Tilt 240°, with auto position correction and electronic replacement function.

Beam Angle: 6°

Control mode: DMX 512, Stand –alone mode, Self-test mode, Sound, Master/slave

DMX Channel: 9CH, 12CH

Control Panel: LCD display panel

IP Grade: IP20

Work Environment Temperature: -20℃~40℃

Other Functions: Pan and Tilt speed adjustable; Fan automatic control function; Menu inversion,

Net weight: 6KG

Gross Weight: 7.5kg

Package Size: 360 x 280x 430cm

Light Size(see it below)

